

BELL HOWELL.

 **Bluetooth®**

**STEREO SPEAKER
FM RADIO**



BH30 User's Manual

Powering BH30 On / Off

Press and hold the power button (on the bottom of the speaker) for 3 seconds until you hear an audible tone. A blue LED will flash every second to indicate that it is powered on and searching for a Bluetooth source to pair with.

To power the speaker off, press and hold the power button until an audible tone is heard. This will indicate that the speaker is powered off.

NOTE: The speaker will automatically power off after several minutes if the Bluetooth connection is not paired with a device.

NOTE: An additional battery icon will appear next to the Bluetooth icon at the top right of your phone/tablet's screen, indicating the speaker's battery level. This is compatible only with certain devices.

Connecting BH30 via Bluetooth

Once powered on, the speaker will automatically enter pairing mode. Go into your phone/tablet's Bluetooth settings and enable Bluetooth. Next, enter the Bluetooth device list and select **BH30**. After selected, wait a few seconds for the pairing to complete. Once the pairing is successful, you will hear an audible tone from the speaker and a blue LED will stay solidly lit..

NOTE: The BH30 will automatically connect to a previously paired device if the paired device's Bluetooth radio is powered enabled and within reachable distance.

Listening to Music from a MicroSD Card

If you would like to listen to music loaded on a MicroSD card, simply insert a MicroSD card into the base of speaker. Be sure that music is in MP3 format and is stored in the root of the MicroSD card's directory. MicroSD mode will

automatically load upon inserting a MicroSD card. Press and hold the UP or DOWN buttons to cycle through available tracks. Tap the UP and DOWN buttons to adjust volume. To cycle between Bluetooth, FM Radio and MicroSD mode, simply tap the power button.

Listening to FM Radio

Simply tap the power button to cycle between Bluetooth, FM Radio, and MicroSD mode. Once in FM Radio mode, press and hold the UP or DOWN buttons to cycle through available FM stations. Tap the UP and DOWN buttons to adjust volume.

Controlling the Sound on Your BH30

PLAY / PAUSE

Tap the PLAY/PAUSE/HANDSFREE button

VOLUME UP / DOWN

Tap ▲ or ▼ buttons to increase or decrease the volume

FORWARD / BACKWARD TRACK

Press and hold the ▲ or ▼ buttons to cycle between tracks.

DECLINE PHONE CALL

Hold down the PLAY/PAUSE/HANDSFREE button until ringing stops.

Answering or Making Calls

If there is an incoming call on your paired phone/tablet, the music will pause and the ringer will ring through the BH30 speaker. To answer a call, simply press the handsfree button.

To end a call, simply press the handsfree button.

NOTE: For best performance and clarity, operate the BH30 within an arm's length. Ensure that the microphone faces your direction.

Charging your BH30 Speaker

Simply plug the included USB cord into the USB port at the base of the speaker. Once plugged in, the LED will illuminate RED. It will turn off once the internal battery is fully charged.

Preserving the Waterproof Seal

Ensure that the side compartment door is fully pushed in. This will prevent any dust and moisture from entering the USB and MicroSD ports.

Factory Reset

If you are experiencing connectivity issues, you may need to perform a hard reset on your BH30. To do so, press the PLAY/PAUSE/HANDSFREE

button for 3 seconds. An audible tone will sound, followed by the LED flashing blue. Once reset successfully, the LED indicator will flash every second and will enter pairing mode.

Specifications

Bluetooth Version: 4.0

Built-in Lithium-Ion Battery: 3.7V, 1400mAh

Charging Voltage: 5V

Speaker: 40mm 4Ω 3W

Frequency: 180Hz-20KHz


Distortion: ≤0.5%

Effective Distance: 10M

Waterproof Grade: IPX4

*Elite Brands Inc., 40 Wall Street, 61st Floor
New York, NY 10005 · Tel: 1-800-441-1100*

*www.bellhowellcameras.com
Distributed under license of BHH LLC
by ELITE BRANDS INC ©2016*

*The  **Bluetooth**™ word mark and logos are registered trademarks owned by the Bluetooth SIG, and any use of such marks by Elite Brands Inc. is under license. Other trademarks and trade names are those of their respective owners.*