


**BELL+HOWELL.**



**WATERPROOF SPEAKER**

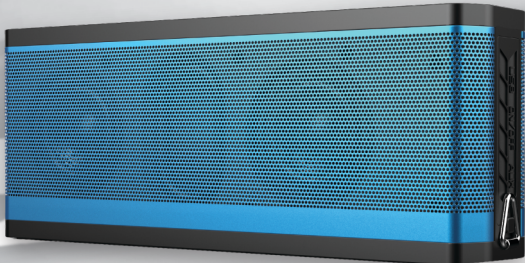


**BH50 User's Manual**

## Powering BH50 On / Off

Slide the power switch ON. Once powered on, you will hear an audible tone. A blue LED will flash quickly every second to indicate that it is powered on and searching for a Bluetooth source to pair with.

To power the speaker off, slide the power switch off.

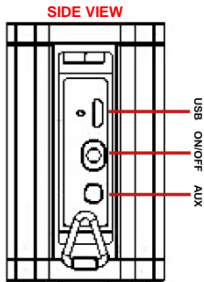

**NOTE:** The speaker will automatically power off after several minutes if the Bluetooth connection is not paired with a device.

**NOTE:** An additional battery icon may appear next to the Bluetooth icon at the top right of your phone/tablet's screen, indicating the speaker's battery level. This is compatible only with certain devices.

## Connecting BH50 via Bluetooth

Once powered on, the speaker will automatically enter pairing mode. Go into your phone/tablet's Bluetooth settings and enable Bluetooth. Next, enter the Bluetooth device list and select **BH50**. After selected, wait a few seconds for the pairing to complete. Once the pairing is successful, you will hear an audible tone from the speaker and a blue LED will stay solidly lit.

**NOTE:** The BH50 will automatically connect to a previously paired device if the paired device's Bluetooth radio is powered enabled and within reachable distance.

## Connecting BH50 via Auxiliary Input

If you would like to use a device that is not equipped with Bluetooth technology, simply connect the included auxiliary 3.5mm cable from your device to the Aux-In input on the side of the BH50. Bluetooth audio will mute while a 3.5mm cable is plugged in.

## Controlling the Sound on Your BH50

---

### PLAY / PAUSE

Tap the PLAY/PAUSE button

---

### VOLUME UP / DOWN

Tap + or – buttons to increase or decrease the volume

---

### FORWARD / BACKWARDTRACK

Tap the ◀ or ▶ buttons to cycle through songs. Tap the ◀ button to rewind to the

beginning of the song. Press and hold the ◀ button a second time to go backwards one track.

---

### DECLINE PHONE CALL

Hold down the handsfree button until ringing stops.

## Answering or Making Calls

If there is an incoming call on your paired phone/tablet, the music will pause and the ringer will ring through the BH50 speaker. To answer a call, simply press the handsfree button.

To end a call, simply press the handsfree button. Press the handsfree button twice to redial the last number called.

**NOTE:** For best performance and clarity, operate the BH50 within an arm's length. Ensure that the microphone faces your direction.

## **Charging your BH50**

Simply plug the included USB cord into the USB port at the base of the speaker. Once plugged in, the LED will illuminate RED. It will turn off once the internal battery is fully charged.

## **Preserving the Waterproof Seal**

Ensure that the side compartment door is fully pushed in. This will prevent any dust and moisture from entering the USB and AUX ports.

## **Factory Reset**

If you are experiencing connectivity issues, you may need to perform a hard reset on your BH50. To do so, press the handsfree button for four seconds. An audible tone will sound, followed by the LED flashing blue. Once reset successfully, the LED indicator will flash every second and will enter pairing mode.

## **Specifications**

Bluetooth Version: 4.0

Built-in Lithium-Ion Battery: 3.7V, 2600mAh

Charging Voltage: 5V

Speaker: 45mm 4Ω 5W x2

Frequency: 120Hz-18KHz


Distortion: ≤0.1%

Effective Distance: 10M

Waterproof Grade: IPX5

*Elite Brands Inc., 40 Wall Street, 61<sup>st</sup> Floor  
New York, NY 10005 · Tel: 1-800-441-1100*

*www.bellhowellcameras.com  
Distributed under license of BHH LLC  
by ELITE BRANDS INC ©2016*

*The  **Bluetooth**™ word mark and logos are registered trademarks owned by the Bluetooth SIG, and any use of such marks by Elite Brands Inc. is under license. Other trademarks and trade names are those of their respective owners.*