

BELL+HOWELL.

 **Bluetooth®**
TRUE WIRELESS
STEREO SPEAKER



BH70TWS User's Manual

Powering BH70TWS On / Off


Press and hold the power button (on the side of the speaker) for 3 seconds until you hear an audible tone. A blue LED will stay solidly lit to indicate that it is powered on.

To power the speaker off, simply press and hold the power button until it powers off.



NOTE: The speaker will automatically power off after three minutes if the Bluetooth connection is not paired with a device.

Connecting BH70TWS via Bluetooth

Once powered on, press and hold the  button for 3 seconds, until a blue/red LED flashes rapidly. This indicates that it is powered on and searching for a Bluetooth source to pair with.

Go into your phone/tablet's Bluetooth settings and enable Bluetooth. Next, enter the Bluetooth device list and select **BH70TWS**. After selected, wait a few seconds for the pairing to complete. Once the pairing is successful, you will hear and audible tone from the speaker and a blue LED will flash every 3 seconds.

NOTE: An additional battery icon may appear next to the Bluetooth icon at the top right of your phone/tablet's screen, indicating the speaker's battery level. This is compatible only with certain devices.


Linking another BH70TWS for True Wireless Sound

The BH70TWS includes True Wireless Stereo (TWS) technology. This enables you to link two speakers to emit a true left / right stereo sound.

Power both speakers on. Press and hold the **M** button on both speakers simultaneously until an audible tone is heard. The blue/red LED will blink rapidly to confirm. This indicates that it is powered on and searching for another BH70TWS to link to.

An audible tone will follow within 10 seconds from both speakers, indicating that they have successfully linked together and the LED will slowly flash blue every 3 seconds.

When linked, they work together as a true left and right stereo speaker, splitting the audio signal to the correct channels.

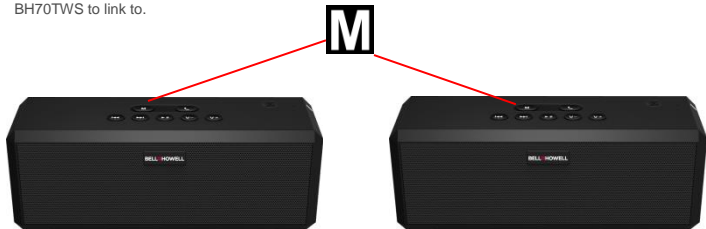

This will connect your phone/tablet with the master speaker which will wirelessly broadcast the right audio signal to the slave speaker.

NOTE: TWS is available in both Bluetooth and AUX mode. Speakers are stereo linked permanently unless reset.

Connecting BH70TWS via Auxiliary Input

If you would like to use a device that is not equipped with Bluetooth technology, simply connect the included auxiliary 3.5mm cable from your device to the **Aux** input at the base of the BH70TWS. Tap the **M** button to cycle between Bluetooth and Aux-In modes. While in Aux mode, the LED will remain green.

Controlling the Sound on Your BH70TWS

PLAY / PAUSE

Tap the  button


VOLUME UP / DOWN

Tap the **V+** or **V-** buttons to increase or decrease the volume. Make sure to firstly set your Bluetooth device to maximum volume

FORWARD TRACK


Tap the  button


BACKWARD TRACK

Tap the  button. On some music apps, this will rewind to the beginning of a track. To go to the previous track, tap twice.

NOTE: If linked to a second BH70TWS speaker, all of the controls on one BH70TWS speaker will apply to both speakers.

Answering or Making Calls

If there is an incoming call on your paired phone/tablet, the music will pause and the ringer will ring through the speaker. To answer a call, simply press the  button of a speaker.

To end a call, simply press the  button of the speaker. Press and hold the same button to decline an incoming call

NOTE: For best performance and clarity, operate the BH70TWS within an arm's length.

Charging your BH70TWS

Simply plug the included USB cord into the USB port at the base of the speaker. Once plugged in, the LED will illuminate RED. It will turn off once the internal battery is fully charged.

Daisy-Chaining" Additional Speakers

Daisy-chaining is accomplished by connecting two speakers with the supplied 3.5mm audio cable. Simply insert one end of a 3.5mm audio cable into the headphone port of a BH70TWS, and insert the other end into the Aux port of any other speaker. Doing so will mute the BH70TWS. Press and hold the **M** button for 5 seconds to unmute the speakers and activate daisy-chaining.

NOTE: "Daisy-chaining" is available in both Bluetooth and AUX mode. You can have up to 2 extra speakers daisy-chained utilizing the TWS feature, for a total output of up to 4 speakers in sync. See illustration below for extended possible configurations.



Factory Reset

If you are experiencing connectivity issues, you may need to reset the TWS pairing. To do so, press the **V+** and **V-** buttons simultaneously for 3 seconds. This procedure must be done on both speakers.

Specifications

Bluetooth Version: 4.2

Lithium-Ion Battery: 4400mAh (2x2200mAh 3.7v)

Charging Voltage: 5V

Speaker: 52mm 4Ω 8W x2


Frequency: 45Hz-15KHz

Distortion: ≤0.3%

Effective Distance: 10M

*Elite Brands Inc., 40 Wall Street, 61st Floor
New York, NY 10005 · Tel: 1-800-441-1100*

*www.bellhowellcameras.com
Distributed under license of BHH LLC
by ELITE BRANDS INC ©2016*

The  Bluetooth[®] word mark and logos are registered trademarks owned by the Bluetooth SIG, and any use of such marks by Elite Brands Inc. is under license. Other trademarks and trade names are those of their respective owners.